

IG6600

# Intelligent Gateway

Quick Installation Guide



Copyright © 2013, All Rights Reserved.

Ver 0.4

## Content of Package

- IG6600 Gateway
- Main stand
- Antenna
- Power adapter
- Ethernet cable
- Quick Install Guide

## Installation

1. Connect the power cable of power supply to the 12 VDC jack on the rear of **IG6600**. Turn on the power switch on power cord without connecting any telephones. When the power LED stops flashing the **IG6600** will be fully powered up and operational.
2. Connect your PC or laptop to the LAN port of the IG6600 using an Ethernet cable.
3. Open your web browser and enter 192.168.1.1 in the address field, and press enter. When prompted enter the user name, which is "admin1234" and password which is 123456.
4. IG6600 provides three levels for access to the programming and diagnostics through the browser. **To prevent potential security exposures from Internet, we strongly recommend you change all of the system's passwords.**

To change the password, log in as the user name "admin1234" and go to:

**Management --> Access Control --> Password**

### *Default Login and Passwords:*

Access Level	User name	Default Password	New Password
Dealer	admin1234	123456	
Administrator	support	support	
User	user	user	

5. The Setup Wizard starts automatically when the **IG6600** is powered up for the first time. It is strongly recommended following the step-by-step instruction to configure most basic settings that enable you to quickly configure your **IG6600**.
6. Use the provided Ethernet cable to connect the **IG6600** WAN port to your network router or network switch, depending on your network configuration choice.
7. Connect your **IP2061** telephones to the same router or switch as IG6600 is connected, one at a time. The **IP2061** telephone will automatically register to the IG6600 and get a valid extension number from **IG6600**.

## Network Configuration


The **IG6600** can be installed several different ways. Installing the **IG6600** these ways as below will allow the system to synchronize the time and date from the Internet and if wanted connect low cost Internet SIP Telephone lines.

**Connecting to an Existing Network:**

Connect the WAN port of your **IG6600** to the existing network, leaving the LAN port disconnected after using it for the initial installation programming. (You need to enable UPnP server setting in router or setup router's DMZ to **IG6600**.)


**Remote Phones Connecting to an Existing Network:**

Obtain a static IP address from your Internet Service Provider (ISP) or use dynamic IP address with Dynamic DNS. (Please check **IG6600** Administration Guide for the further information.) Connect the WAN port of your **IG6600** to ADSL/Cable modem via an Ethernet Switch and enter the Static IP address in the WAN programming of the **IG6600**, without connecting the LAN. **IP2061** should be pre-configured SIP Proxy settings as **IG6600**'s WAN IP address. (Please check **IP2061** manuals for the further information)

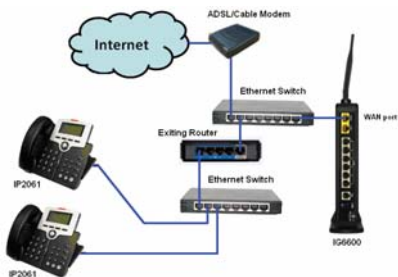

**Using the IG6600 as a Router:**


Obtain a static IP address from your Internet Service Provider (ISP) or use dynamic IP address with Dynamic DNS. (Please check IG6600 Administration Guide for the further information). Connect ADSL/Cable modem to the **IG6600** WAN port and use the LAN port to connect all of your phones and computers via Ethernet Switch.

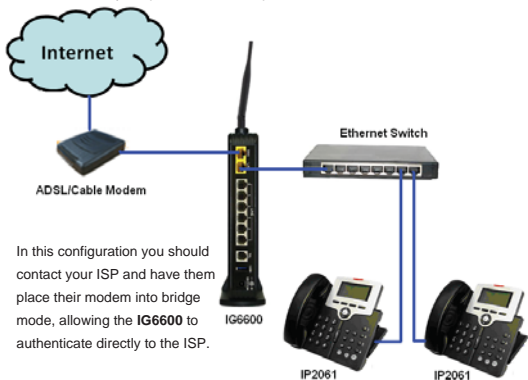

In this configuration you should contact your ISP and have them place their modem into bridge mode, allowing the **IG6600** to authenticate directly to the ISP.

**Connecting Telephone Lines:**

You can connect up to six PSTN telephone lines to your **IG6600**. Use the telephone line cords to connect the Line port 1 ~ 6 to the standard phone jacks for PSTN Line support.

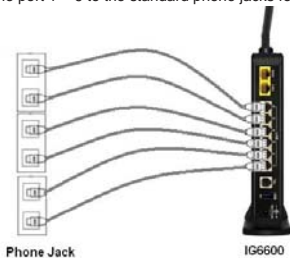

**IG6600**